

LEGENDS PINBALL



AtGames

INSTRUCTION MANUAL



Index

 
Assembly Guide	P4
Packaging/Unboxing Warning	P7
Controls & Inputs	P8
Quick Start Guide	P9
How to Update Firmware	P9
How to Sign In with Your ArcadeNet® Account	P10
Product Registration/Warranty Info	P11
Game List	P12
Safety Notice, FCC Statement	P13
ISED Statement	P14



Assembly Guide

Legends Pinball comes in two boxes. Due to the weight of the first box, it is recommended that you have another person help install the legs.


TOOLS INCLUDED

**a**


Hex key (included)

**b**

 
Key (included)

**c**

 Wrench (not included)

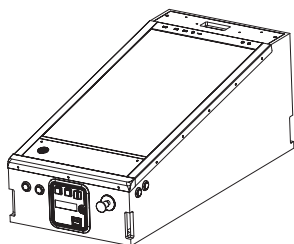**A**

 Playfield

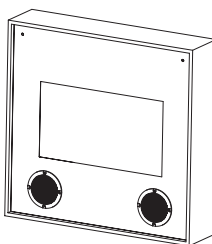
**B**

Backglass


**C**

 Leg X4

SCREWS


**SA**

 X8

**SB**


X4

 CORD

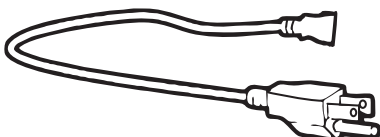
**M**

AC adapter

 
Assembly Guide

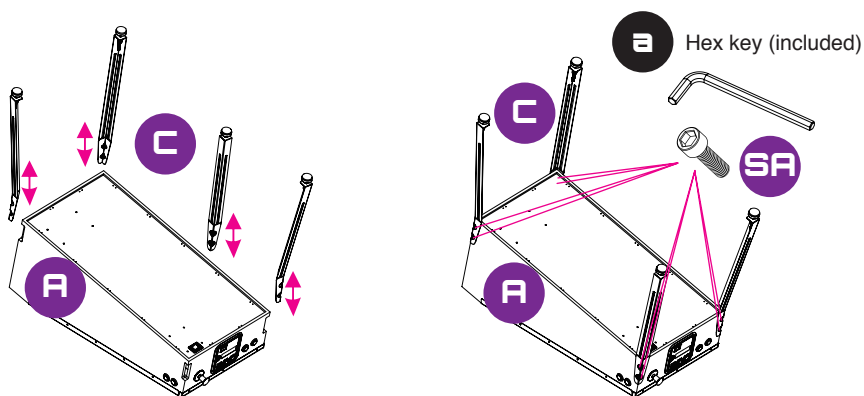

 Step 1. Take out the playfield, legs, and 8 [SA] screws. Put the playfield upside down on a soft surface. Attach the legs to the main cabinet and insert 8 [SA] screws to the matching holes with [a] hex key.

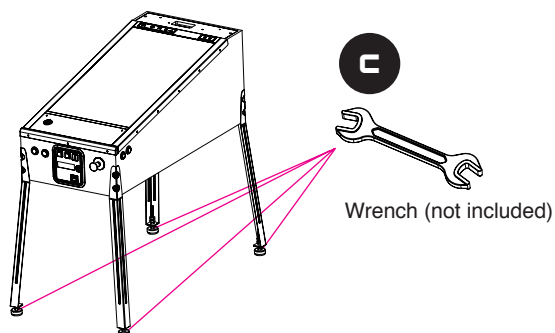


 Step 2. Position the playfield upright. Use the [c] wrench to adjust the height of the playfield to your liking. Tighten the base screws when set.

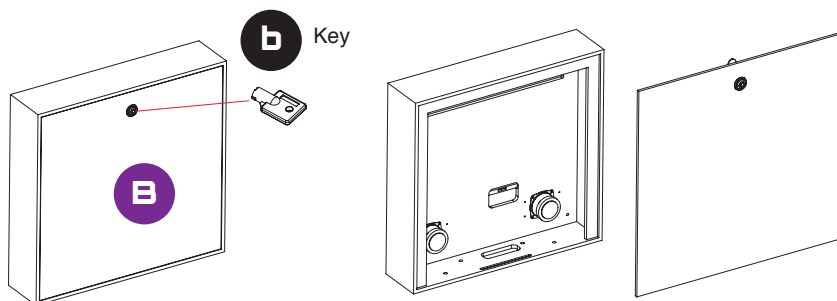


Step 3. Take out the backglass and the included [b] key. Use the key to open up the rear panel on the backglass.

 Assembly Guide

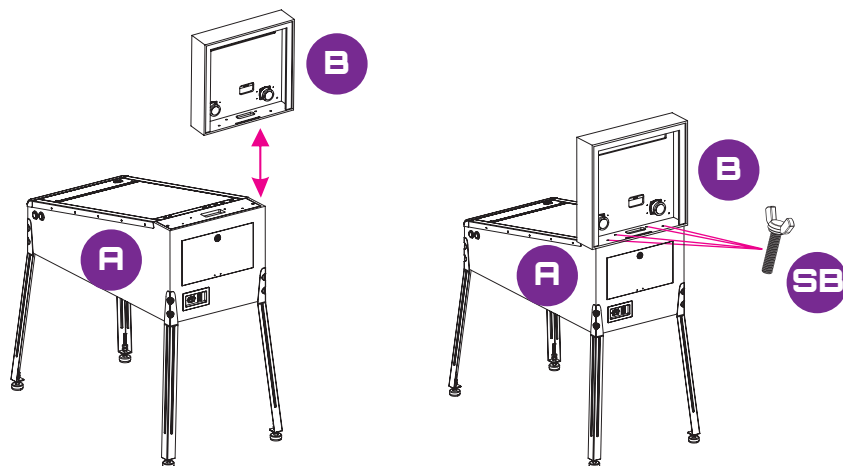

 Step 4. Attach the backglass to the top of the playfield. Tightly insert 4 [SB] screws to the matching holes. Securely connect the cords to the matching slots.

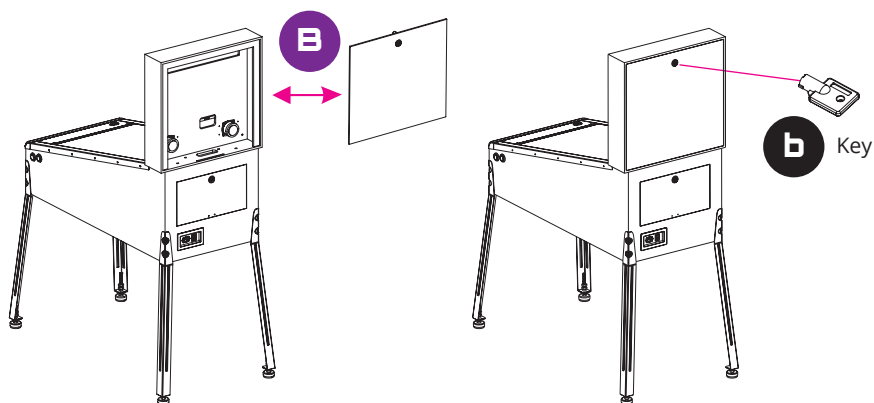


Step 5. Attach the back cover of the backglass and tighten it with the included [b] key.

Packaging/Unboxing Warning

- Please note that when assembling the machine that the top rear of the playfield has an opening for connecting the backglass.
- Because of the weight of the cabinet body, carrying the cabinet body by grabbing onto this opening can cause serious damage to both the body and electronics inside.
- Please exercise extra caution when moving the cabinet body and backglass so that you have an ideal and safe out-of-the-box experience.



 •**WARNING:** Failure to connect cable correctly could result in damage. Ensure ends are plugged together with arrow facing arrow.

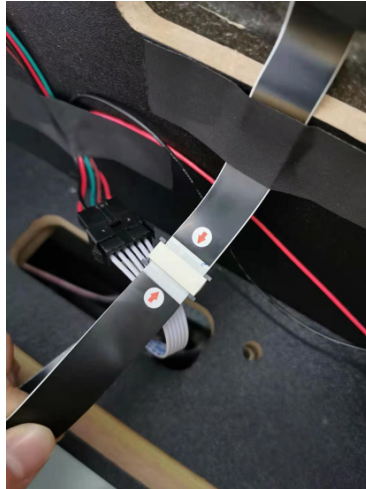

Attaching Backglass Ribbon Cable

- Carefully pull out the end of the connector of the Backglass FPC cable by gripping either side of the black slide lock and gently pull down. Fig.1

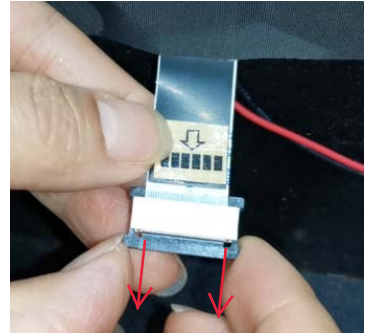 


Fig. 1

- Connect the pin end of the cable from the main console to the Backglass cable connector. Make sure both ends are properly connected. Fig. 2

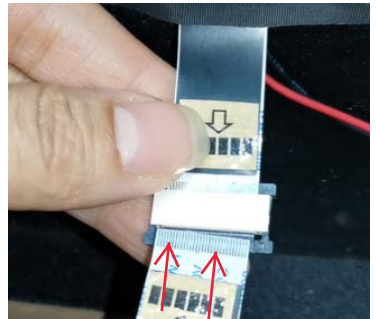 


Fig. 2

- Push back the end of the connector of the Backglass cable after both ends are properly connected. Fig. 3


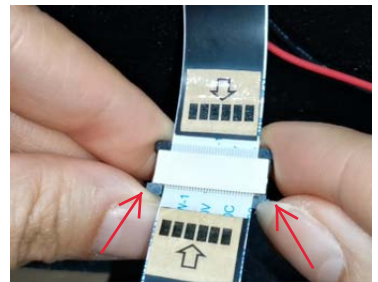 


Fig. 3

 Controls & Inputs

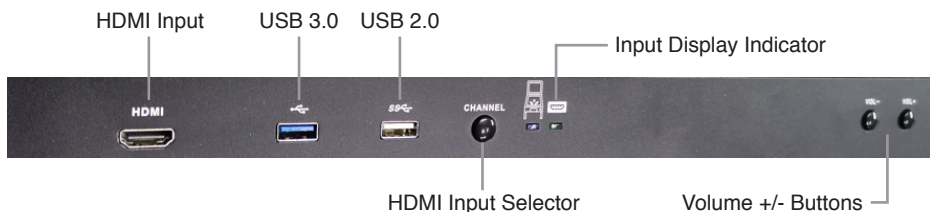

Nudge Button

Flipper Button



Located on the back of unit

 


Power Input

Ethernet Input

Quick Start Guide

1. Plug in AC adapter and press the Power button found under the front of the cabinet to turn on. Use D-pad to select from the 22 pre-loaded games.
2. Connect internet via Ethernet (Ethernet cable is not included) or Wi-Fi for updates and to play more games on ArcadeNet®.
3. To connect through Wi-Fi:
 - 3-1. Select [Wi-Fi] under the [SETTINGS] page.
 - 3-2. Select the Wi-Fi SSID you would like to connect to and select [Connect].If prompted, enter the Wi-Fi password using the on-screen keyboard and select [Submit] when done.

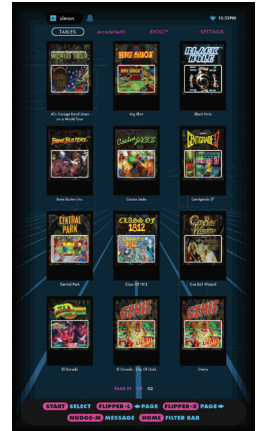


How to Update Firmware

1. Power on the arcade.
2. Connect internet via Ethernet (Ethernet cable is not included) or Wi-Fi.
3. Go to [SETTINGS] and select [Version].
4. If there is a newer firmware, follow the instruction to download the latest firmware. Make sure the internet connection is stable during this process.
5. Once the firmware is downloaded successfully, select [Upgrade] and the device will reboot automatically to activate the new firmware version.




Note: If you encounter any issues on firmware update, please refer to:
<https://www.atgames.net/arcades/faq/> or contact support@atgames.net

How to Sign In with Your ArcadeNet® Account

 1. Go to [SETTINGS] and select [SIGN IN].
2. Sign up for a new account if you do not have one yet.
3. Once you have an ArcadeNet® account, you can choose either to sign in with your email or with the QR code. To sign in with your email, enter the email address and password.
4. To sign in with the QR code, a smartphone is required.

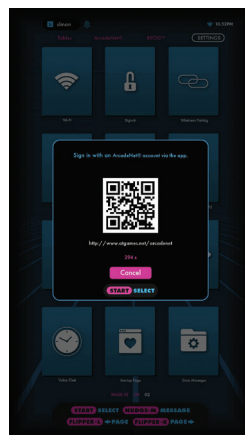

   5. Use a smartphone to scan the QR code on the screen and launch the ArcadeNet® website. You will be directed to the login page, where you can choose either to sign in with an existing Google/Facebook account or your email.
6. You will see the authorization notification once complete. Now you can close the window and return to your arcade. A "Success!" message will show on the arcade once signed in.

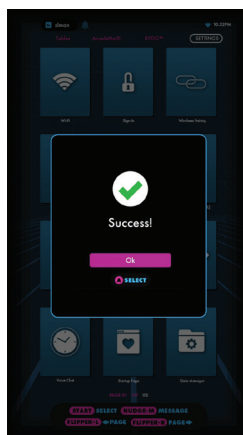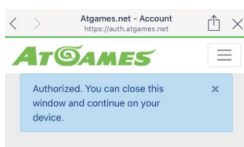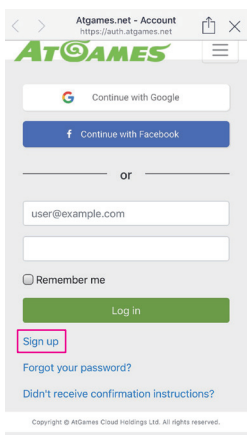

Product Registration

Use your ArcadeNet® account login to register your product. If you signed up for a new ArcadeNet® account, follow the instructions in the product registration email sent to the email address associated with the account. If you already have an ArcadeNet® account, you can view your new device by going to the ArcadeNet® website, logging in, and selecting Registration under My Account.

When to Safely Power Off Arcade

Do not power off the cabinet during the following:

- Firmware update
- Factory reset
- Data cleanup
- Read/write USB drive

This could prevent irreversible data loss and/or damage to your cabinet and USB drives.

Warranty Info

The manufacturer warrants this product to be free and clear of defects in the materials and workmanship, under normal residential use and conditions, for a period of thirty (30) days from the original invoice date. Shipping and handling fees are to be paid for by the customer. To make a warranty claim, please submit a service request here: support@atgames.net.

Standard warranty coverage for the AtGames Legends Pinball does not apply to and is considered invalid due to misuse, improper maintenance, self-repair, tampering, or invasive hardware modifications of any kind, and damages or dysfunction caused by shipping or non-manufacturing related causes.

 
Note: Standard warranty services are valid with receipt from an authorized retailer. Purchases through third-party sellers and resellers do not fall under the standard warranty program.

For warranty support, please contact the third-party seller or reseller where you purchased the product.

Games List



Al's Garage Band Goes
on a World Tour



Bone Busters Inc.



 
Central Park



El Dorado City of Gold



Goin' Nuts




Lights... Camera... Action!



Tee'd Off



 Big Shot




Cactus Jack's



Class of 1812



 Genie




Haunted House



Pistol Poker



 TX-Sector




Wipe Out




Black Hole



 Centigrade 37



Cue Ball Wizard

 


Gladiators



Jacks Open



 Rescue 911



Victory



©2020 FarSight Studios, Inc. All rights reserved. All trademarks and their copyrights are the property of their respective holders.
Created and distributed under license from
Gottlieb Development, LLC. All rights reserved.

The device will not power on. I've plugged it in correctly what could be wrong?

- Due to shipping, wires and connections may come loose. Unplug the device, then, using the included key, remove the back panel of the main body. Look into the opening at the backside of the power outlet and ensure that all cables are connected and seated properly.

The device will power on, but the screens are blank. What could be wrong?

- Due to shipping, wires and connections may come loose. Unplug the device, then, using the included key, remove the back panel of the main body. Look at all HDMI connections and ensure that all cables are connected and seated properly.

I don't have anyone to help me assemble, is there another way to assemble it?

- With proper padding placed on the floor, you can place the main body on it's rear door facing down, allowing the device to stand upright. Attach the front legs to the main body. Using a chair, table, or other sturdy object (ensure that the object you choose is tall enough to allow the rear legs to be attached), lift the rear end of the main body and set it on the sturdy surface of your choosing. Attach the rear legs.

The games/menus are not behaving like expected. What could be wrong?

- It is recommended that you update to the latest firmware. Older firmwares are not typically as optimized as the latest versions.

The legs/backglass will not screw in all the way. What could be wrong?

- Rarely, machined parts, i.e. screws, bolts, etc., will have imperfections in them. Try using one of the included extra screws/bolts. If there is still a problem, ensure the receiving threaded unit is clear of debris or imperfections and is seated properly in the unit. If you still have a problem, contact Support at support@atgames.net for further assistance.

Safety Notice

- Do not submerge the arcade cabinet in water or expose it to extreme heat or to strong magnetic fields. Doing so may cause permanent damage to your device.
- Always use a dry towel to clean the cabinet and the control top.
- Transformers are suitable for indoor use only. Transformers and power supplies for toys are not intended to be used as toys, and the use of these products by children shall be under the full supervision of parents.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For Game Host

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Warning

Adult assembly required. Due to the presence of small parts during assembly, keep out of reach of children until assembly is complete.

ISED Statement

- English: This device complies with Industry Canada license - exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.
The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).
- French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
L'appareil numérique du CIEM conforme canadien peut - 3 (b) / nmb - 3 (b).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé. Cet équipement doit être installé et utilisé à distance minimum de 20cm entre le radiateur et votre corps.

 
This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

5GHz band (W52): Indoor use only.



LEGENDS PINBALL

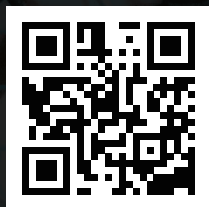

Sign Up at www.arcadenet.net



ATGAMES

© 2020 AtGames Interactive

www.atgames.net

PO Box 1691, El Segundo, CA 90245

All rights reserved.

*Content and images are for reference only and subject to change.

Made in China

For additional support please email:

support@atgames.net