

## Atari Flashback X – Firmware Update

### Tools/files you'll need:

1. "Y cable" (OTG split cable with at least: 1x male 5-pin micro, 1x female 5-pin micro, 1x female Type-A USB, must be able to supply power to the male micro USB)
2. Firmware image ([Download](#))
3. USB drive
4. Windows PC

### Step 1

Verify your model number matches the downloaded image (it should be either AR3060 or AR3060"S"). Rename the firmware image to "atari\_update.img" and place it in the USB drive's root directory.




### Step 2

Set the Y-cable to "I" position if a toggle switch is available; use the cable and connect the console, USB power cable, and the USB drive from step 1.

### Step 3

Turn the console on to see the firmware update dialog, select YES to proceed with update.

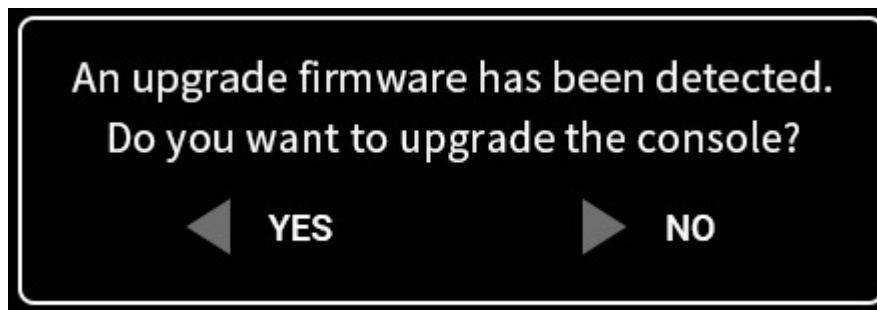

#### Step 4

The console will reboot after the update completes, you will see the update dialog again upon reboot. Select No to continue to the menu.

#### Step 5

Verify the firmware version is correct and delete the firmware image from the USB drive to avoid seeing the upgrade dialog again.

#### Step 6

NOTE: if you are unable to update via the steps above, your firmware may not support Y-cables. Please note the current firmware version and contact [support@atgames.net](mailto:support@atgames.net) for additional help.